



LIGHT LIVESTOCK EQUIPMENT
BY AUSABLE VALLEY ALPACAS
LIGHTLIVESTOCKEQUIPMENT.COM
(866) 999-AVA1(2821)

Tumbler Maintenance & Specifications

1. Keep it clean and in a relatively dry and dust free environment.
2. Check the belt prior to use, and on an annual basis.
 - a. The fiber drum tumbler uses an A- type V belt, 57", trade size 4L570
3. Inspect the conditions of the electrical cords and foot pedals prior to usage. Replace if needed.
4. Check tumbler support bearings on an annual basis. Grease with any standard grease if needed.
5. Check over the ½HP 30 rpm Dayton Gear Reduction Motor. Use an air compressor to blow any residual dust out on an annual basis.
 - a. The Dayton Motor will come with a one year manufactures warranty.
6. **DO NOT OPPERATE WITHOUT DOOR LATCH PINS INSTALLED!**

The tumbler does not require a lot of maintenance. Just make sure all the moving parts are in good condition and the tumbler will run for as many years as you have animals.